
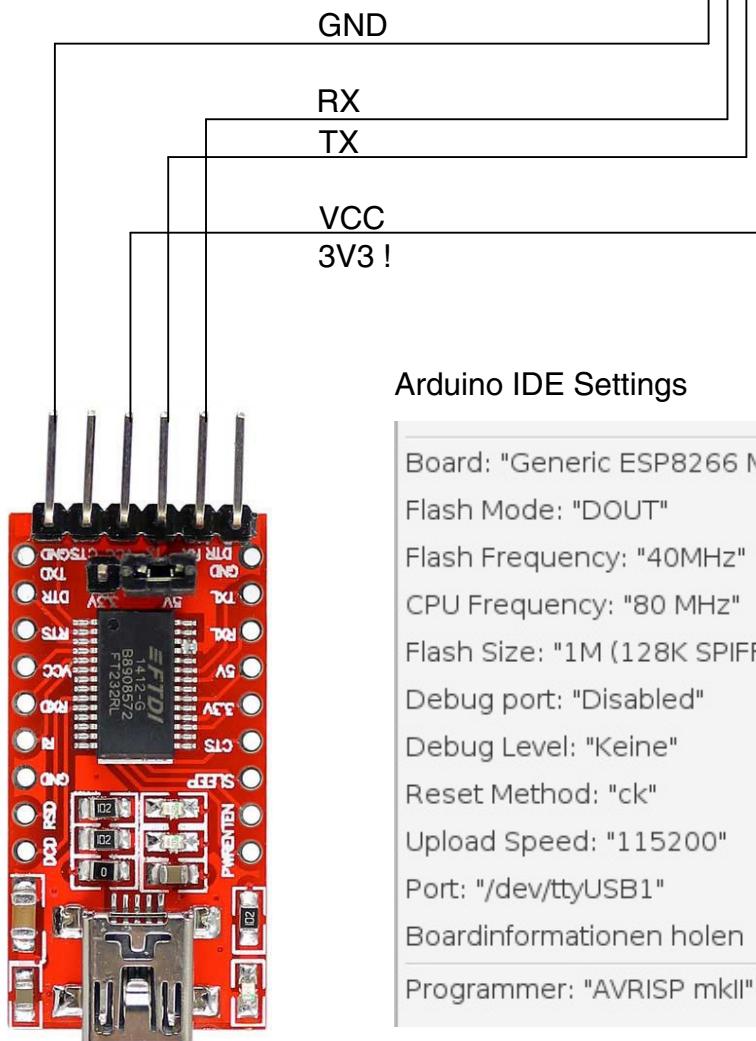


Sonoff S20

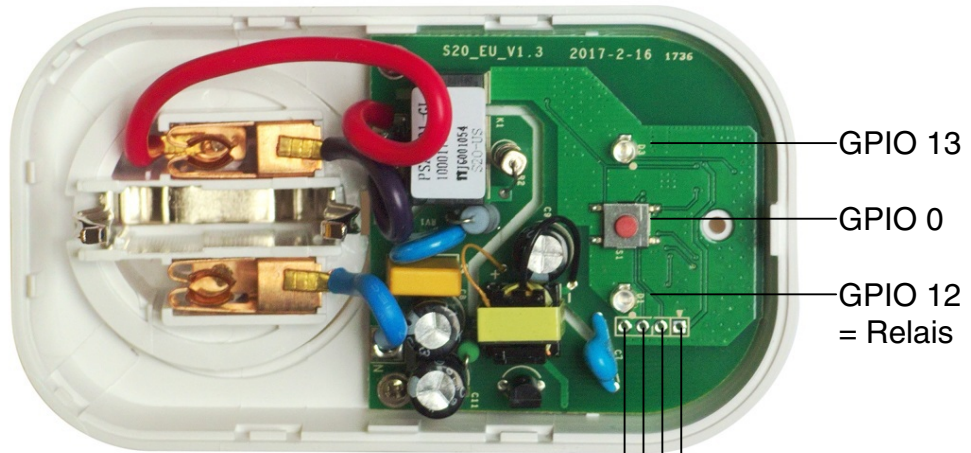

Arduino IDE Settings

```
Board: "Generic ESP8266 Module"
Flash Mode: "DOUT"
Flash Frequency: "40MHz"
CPU Frequency: "80 MHz"
Flash Size: "1M (128K SPIFFS)"
Debug port: "Disabled"
Debug Level: "Keine"
Reset Method: "ck"
Upload Speed: "115200"
Port: "/dev/ttyUSB1"
Boardinformationen holen
Programmer: "AVRISP mkII"
```